



## SPARE PARTS LIST

### COLUMBUS WHEEL SPINNER SP75-PC

Description, spare parts number and chassis number must always be stated in your order.  
The letters within brackets ( ) correspond to the letters in the attached wiring diagram.

<b><u>No.</u></b>	<b><u>Description of part</u></b>
SP75 10	Cable sleeve M25 - for the junction box
SP75 20	Kit - starting handle - forward & reverse
SP75 30	Hand grip
SP75 40	Stop screw for the stating handle
SP75 50	Circuit breaker at power failure (P1)
SP75 60-80	Kit - emergency stop including adaptor and contact block (S3)
SP75 90	Kit - plastic cover for start and stop buton
SP75 100	Kit - attachment screw for the junction box cover
SP75 101	Junction box cover
SP75 110	Surge protector - current (MS)
SP75 120	Starting switch for the spinning wheel (RS)
SP75 130	Shaft
SP75 140	Contact for the power intake
SP75 150	Electric motor (M)
SP75 160	Kit - attachment screws for the electric motor
SP75 170-220	Kit attachment screws for the shaft
SP75 230	Machine wheel
SP75 240-290	Kit - wheel shaft bolt
SP75 300-320	Kit - attachment screw for the support wheel
SP75 330	Support wheel - rubber
SP75 340-360	Kit - screw and washers for locking of the spinning wheel
SP75 370	Spinning wheel
SP75 380	Inner support washer for the spinning wheel
SP75 390	End plug for the shaft
SP75 400	Cable sleeve for the electric motor M25
SP75 410	Cable sleeve for the power intake M20

