 




Spare parts list - Columbus electric wheel nut runner WNR-STD, WNR-EC, WNR EC2

Description and spare parts number must always be stated in your order

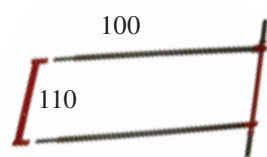

100. Wheel stand.
110. Wire attachment.




120. Kit - nuts and washers for the wire attachment.



130. Lift stop-pin.
140. Piano wire for the lift stop-pin.
150. Return spring for the lift stop.



160. Transport wheel.
170. Kit - starlock washer and washer for the transport wheel.

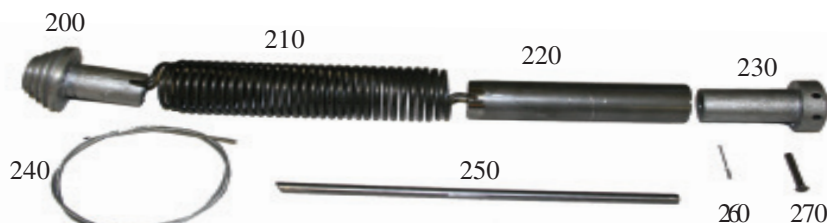

200. Lift drum - centre hole 10mm.
210. Lift spring.
220. Centering sleeve.
230. Tensioning roller - centre hole 10mm.
240. Lift wire.
250. Lift shaft - diameter 10mm.
260. Rivet.
270. Stop pin for tensioning roller.



300. Wrench holder tube including bushing and locking screw.
N.B. Only casted tubes available.



310. Wrench holder tube including complete shaft No. 400 - 460. **Note! At replacement of wrench holder tubes, up to Chassis No. 1321, the parts - No. 300, 470 and 1600 are needed.**



320. Bushing for wrench holder tube.
330. Lock screw for socket.



400. Centre shaft locked with 2 pcs. lock nuts.
410. Lock nuts - 2 pcs.
420. Locking washer - 2 pcs.
430. Spacer ring.
440. Bearing.
450. Lock screws for the spacer ring.
460. Lock ring for bearing.
470. **Center shaft without threads, locked with a lock screw - up to chassis No. 1321.**



500. Flywheel - State chassis No!




510. Flywheel bearing.
520. Flywheel bushing - bushing is standard from chassis No. 1820.



530. Clutch carrier - width 37mm up to chassis No. 664.
540. Clutch carrier - width 41mm up to chassis No. 2184.
550. Clutch carrier - width 51mm from chassis No. 2185 -
560. Lock ring for clutch carrier.



600. Angle pawl - dia. of shaft 20mm up to chassis No. 737.
610. Angle pawl - dia. of shaft 22mm up to chassis No. 1508.
620. Angle pawl - dia. of shaft 26mm from chassis No. 1509 -
630. Anchor spring for angle pawl.

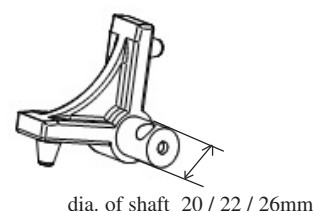


640. Return spring for angle pawl - 2 pcs..
650. Lock screw & lock washer for pawl link pin.
660. Pawl link pin - dia.10mm at shaft dia 20mm.
670. Pawl link pin - dia.12mm at shaft dia. 22 & 26mm.

Columbusmaskiner AB
Hejargatan 13
632 29 Eskilstuna - Sweden

Phone
+ 46 724 544 244

E-post
info@columbusmaskiner.se

Web page
www.columbusmaskiner.se

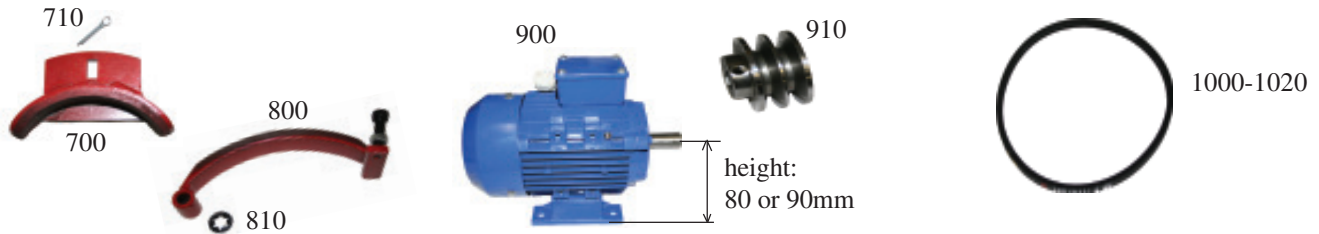

700. Clutch brake (lower brake).
 710. Split pin.
 800. Flywheel brake (upper brake).
 810. Starlock washer.
900. Electric motor. *Height 80mm. requires spacers under the motor foot. At height 90mm. spacers must not be amounted.*
 910. Belt pulley - A62 from ch. No. 1100.
1010. Drive belt - dimension A29½" up to chassis No. 1099.
 1020. Drive belt - dimension A30" from chassis No. 1100 -



1100. Electric plug with ½ m. cable.
1110. Casing.
 1120. Lever.
 1130. Electric switch.
 1140. Complete forward and revers switch.
1200. Motor mounting bracket.
 1210. Push rod for belt tension.



1220. Kit - clamps for motor mounting bracket.
1230. Kit - fastening bolts for the electric motor.
 1240. Return spring for the motor mounting bracket.
1300. Rocker arm for the clutch brake.
 1310. Piano wire for the clutch brake.
 1320. Rocker arm - complete with wire.
 1330. Return spring for clutch brake.




1400. Rocker arm for belt tension.
 1410. Piano wire for rocker arm.
 1420. Rocker arm - complete with wire.
 1430. Adjusting screw for rocker arm.
1500. Shaft including starlock washer for arm No. 1300 and No. 1400.
1600. Flywheel cover.
 1610. Kit screws for cover.



1700. Machine body - complete from chassis No. 1322 -
 1710. Plastic handle for shafts.
1800. Cover - from chassis No. 1322.
 1810. Spacer sleeve.
 1820. Handle knob.
1900. Rivet & locking washer for part No. 1910 & 1920.
 1910. Handle - right side.
 1920. Handle - left side.
 1930. Impact control lever.

The following parts apply only to type: Columbus WNR-EC and WNR-EC2

Type Columbus WNR-EC

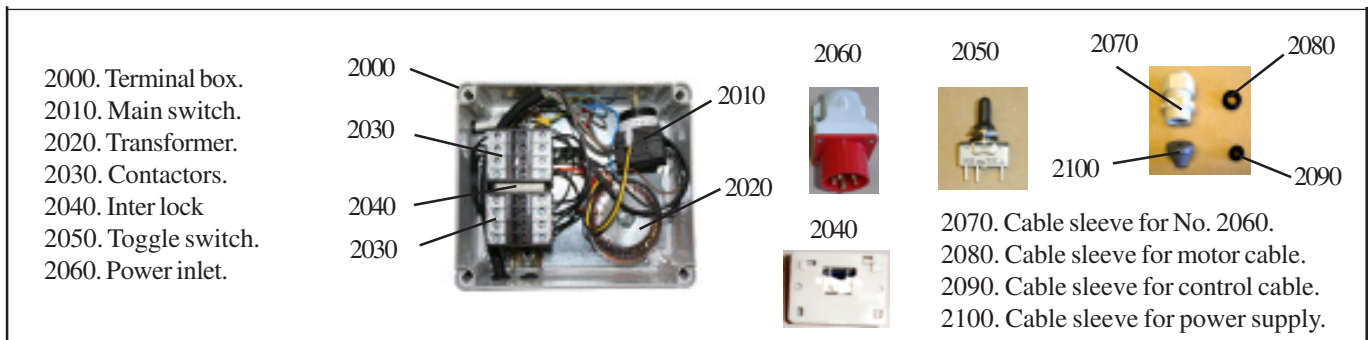

Type Columbus WNR-EC2

